 
 
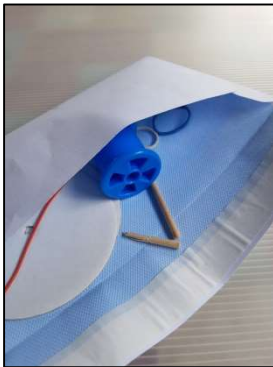 
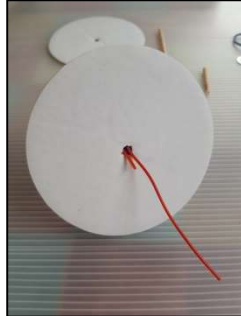 


How to Make a Band-roller

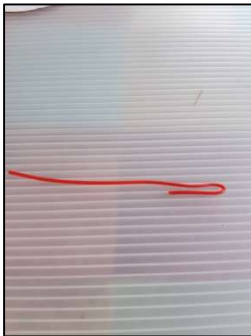




Take the pieces out of the envelope. There should be:

- 2 card discs
- 2 elastic bands (one spare)
- 1 metal washer
- 1 cotton reel
- 1 long piece of wood
- 1 short piece of wood
- 1 piece of wire

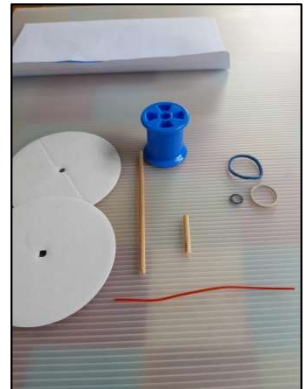

1. Fold about 2 cms of the wire back on itself, to make a hook. Make sure the hook is narrow enough to pass through the hole in the centre of one of the card discs.

2. Fit one of the elastic bands into the hook. Use the hook to pull the elastic band through the centre

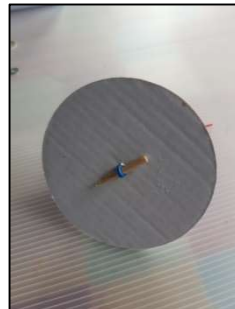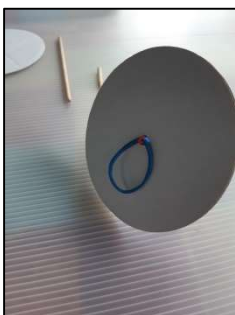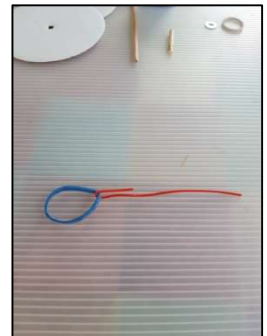

hole of one of the discs.

3. When the elastic band is almost through, put the small piece of wood through the loop of the elastic band and pull it tight.

4. Use a piece of sellotape to hold the wood, so it doesn't fall out.

5. Now use the hook to thread the elastic band through the centre of the cotton reel, then the centre of the next card disc.



6. Slide the washer over the hook. Make sure both sides of the hook pass through the washer.

7. Pull the elastic band through the washer and push the long piece of stick through the loop.

8. Take the wire hook out of the elastic band. Keep it safe in case you need to repair the bandroller.

9. Your band-roller is now ready to use. Wind the long stick (called the winder) round and round about twenty times. Then put the roller on a surface and let go...

